

DOOR KEEP ADJUSTMENT

SIMPLE ADJUSTMENTS FOR A PERFECT FIT

SECURE
SMOOTHER
WEATHER TIGHT
BUILT TO LAST

KEEP OVERVIEW

IDENTIFICATION OF KEEPS AND ADJUSTMENT POINTS



1 CAMB KEEP ADJUSTMENT (LEFT / RIGHT)



- 1 Loosen the mounting screws slightly.
- 2 Move the keep horizontally left or right to achieve the correct compression on the gasket.
- 3 Re-tighten the screws securely.

2 HOOK KEEP ADJUSTMENT (LEFT / RIGHT)



- 1 Loosen the mounting screws slightly.
- 2 Move the keep horizontally left or right to achieve the correct compression on the gasket.
- 3 Re-tighten the screws securely.

i **Note:** The diagonal screws shown are part of the hook keep fixing and do not require separate adjustment.

3 LATCHING KEEP ADJUSTMENT (LEFT / RIGHT)



- 1 Loosen the mounting screws slightly.
- 2 Move the keep horizontally left or right to achieve the correct compression on the gasket.
- 3 Re-tighten the screws securely.

TOOLS REQUIRED



Flat head screwdriver
(for all adjustments)

i IMPORTANT INFORMATION

- ✓ Adjust only one keep at a time.
- ✓ Make small adjustments and test the door after each change.
- ✓ Ensure all screws are fully tightened once adjusted.
- ✓ Keep the keeps clean and free from dirt and debris.
- ✓ Light lubrication can be applied to the moving parts if required.