


Toe and Heeling Guide for Kommerling casement's with Cotswold stays (when fitted)

- Ensure the glass has a 5mm even spacing from the glazing rebate of the sash.
- If using bridging packers, please note they are used to square the glass only. **They do not create lift.**
- Packers should be between 50-100mm from the corner of the sash.
- Ensure none of the packers cover the drainage holes.
- Ensure a riser block is used on all side hung and top hung applications as shown.

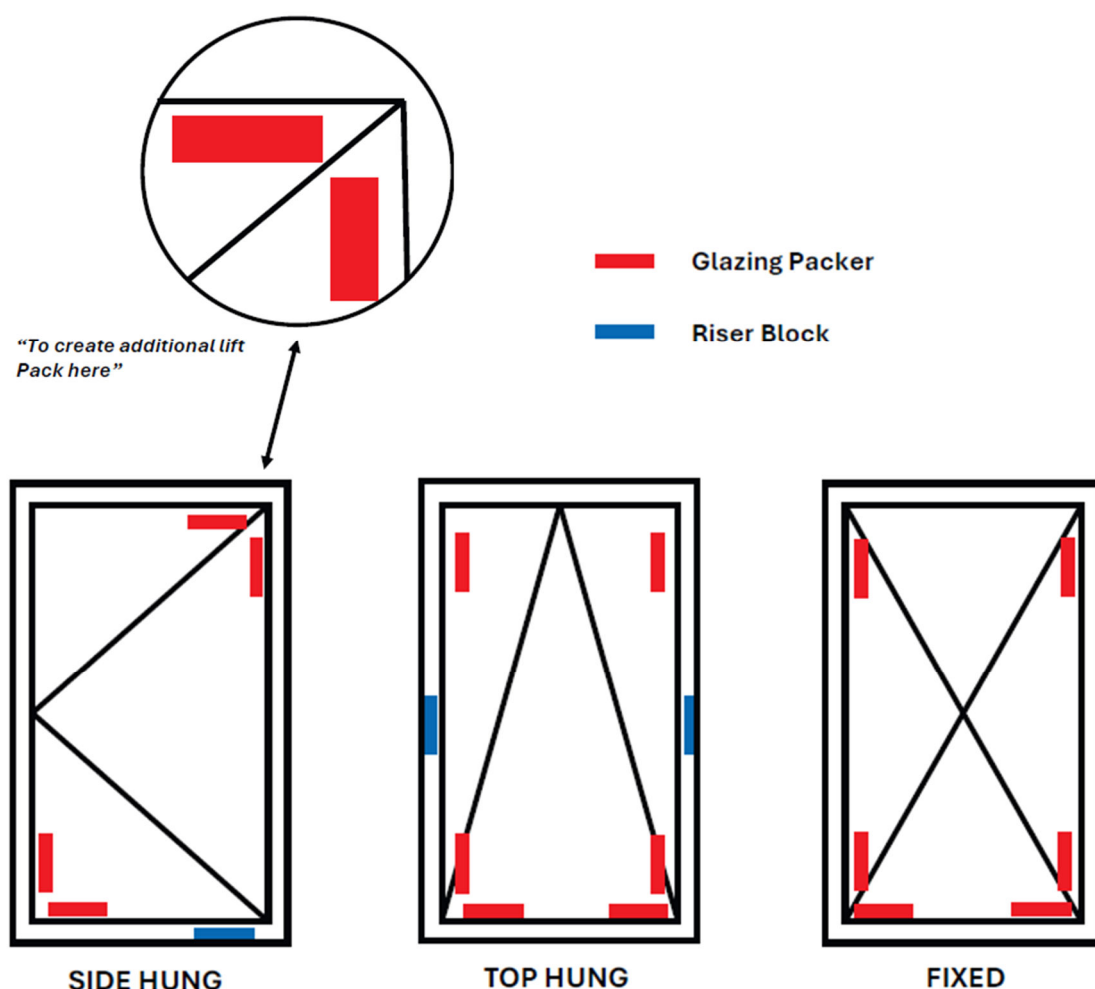

Head Office
Pywell Road, Willowbrook East Ind. Estate,
Corby, Northants.
NN17 5XJ
T 01536 271940
F 01536 264060

Distribution
Unit 10 Westgate Park Ind Est
Tintagel Way, Westgate
Aldridge WS9 8ER
T 01922 749277
F 01536 264060

Shenstone Drive, Aldridge
Walsall, West Midlands
WS9 8TP
T 01922 749272
F 01536 264060